

Spare parts 1530

1530A

Håndsender TeleRadio
Transmitter TeleRadio



1530B

Bælteclips til sender TeleRadio
belt clip TeleRadio



1530E

Antenne TeleRadio
Antenna TeleRadio



1530C

Actuator LA36
Actuator LA36

1530H

Gummiknap TeleRadio sender
Rubber button f/ remote TeleRadio



1530D

Motorstyring t/1530 - printplade
Steering f/radio 1530 circuit board



Spare parts 1530

Freq. Range 434.075-434.775 MHz

1530F Håndsender ELCA
Transmitter ELCA



1530G Antenne ELCA
Antenna Elca



Freq. Range 868.0125-869.9875 MHz

1530I Håndsender ELCA
Transmitter ELCA



1530J Kabel f/actuator LA36
Cable f/actuator LA36



1530K Lader Elca
charger Elca



1530L Modtager Elca
Receiver Elca



Spare parts 1530

1530M Modtager TeleRadio
Receiver Teleradio

